




HP564/364/178 chip reset instructions

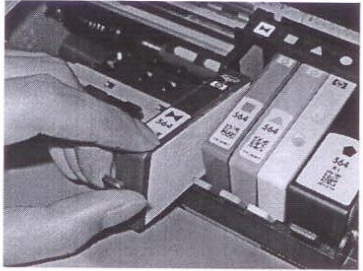


Open the printer, take out the cartridges which are empty

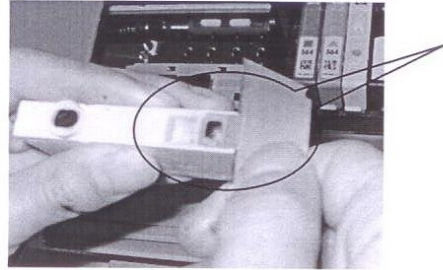


Pare off the original chips with a knife carefully

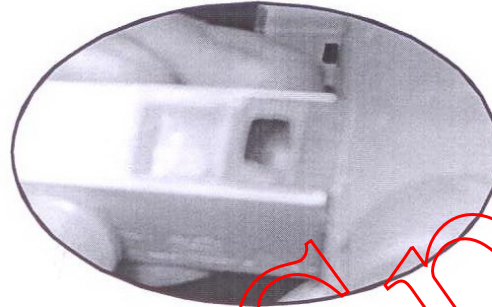


The knife should be pared under the chips totally and smoothly

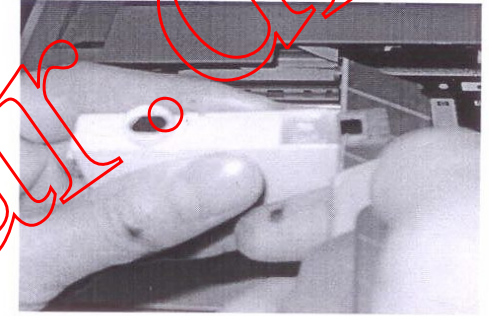


The knife must be parallel as the chip in the course of cutting, which can't turn up to avoid mangling the chip.

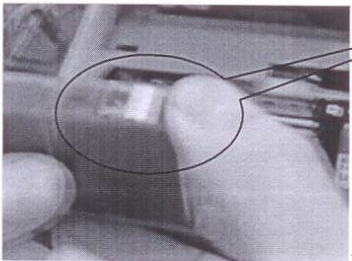


Put the chips onto the right place

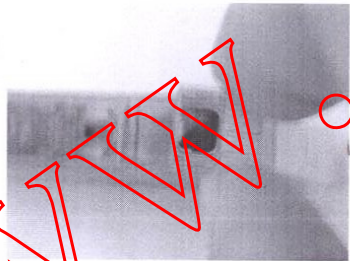


Take the new chip level as the area of the chip

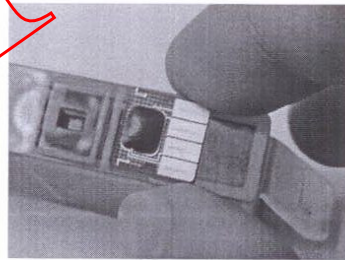

Put the chip into the chip area

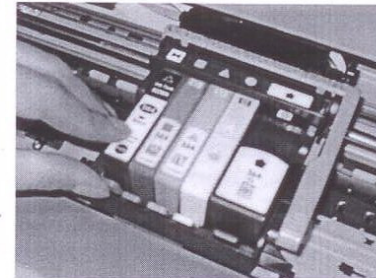

Install the cartridges with chips into the printer, and close the cap

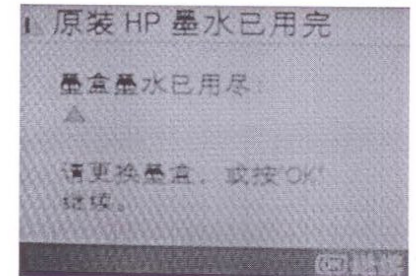

Press "ok" when the screen show some messages.

WWW.TRYKSPART.COM