


Scorpia

Inking Systems 

for Epson Stylus CX3200

Save Money!

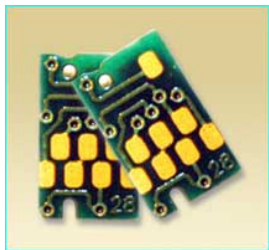

With auto reset chip



www.TrykSpar.dk
www.Benefit-Ink.com

Brand names such as "Epson" and "Canon" are used for descriptive purposes only, and remain the property of their respective owners.

INSTRUCTIONS

The instructions provide show the general installation procedure for Epson Stylus Color 740/760/860/880/1160/CX3200.... The pistures provided show the process for the Epson Sylus Photo 1290/ CX3200

Get everything together in one place so you can do this all at the same time. It will take about 15 minutes of your time. It is not difficult if you have the right tools. Of course the second time you do it , it will be a lot easier.

Preparaion for installation

Remove the Pre-Primed SIS module from its shipping carton and place the module in front of you on a hard flat surface such as a table top.

Inspect the SIS module for any signs of damage, loose seal fittings, or signs of ink leakage. Make a check on the tightnees of the SIS module tubing end seals.

Always check the nozzles before and after each cleaning. You must have a perfect nozzle pattern before you begin installing the SIS.

Do not proceed unless you have a perfect nozzle pattern

Push the paper feed button on the printer to move the cartridges to the cartridge change position. Remove the original cartridges from the printer and the cartridge hold down clamps.

The 2 cartridge holder lids must be removed in order to attach the SIS system. This is the only printer modification required. If you wish to return the printer to its original factory condition, the lids can be easy reattached.

Use your small screw driver and twist it at the hinge point of the clamps. They will come right out with a twist of the screwdriver. Set them aside in a safe place, you may need them in the future.

With the power still on the printer, pull the power plug from the wall

Cartridge Installation

Install the cartridge in the printhead, pushing down firmly to lock the cartridges in position.

Find the aluminium or plasctic tube clip. Peel the backing off of the foam tape, and mount the tube clip as shown in the picture (Clean the housing with alcohol).

Gently push the printhead to the left position as far as possible. Using this position as a guide, gently extend the tubing in a straight line to the aluminium tube clip. The tubing should be in a straight line from the printhead and should appear flat, not be twisted. Fix the tubing into the tube clip.

Slide the cartridges back and forth from left to right, and right to left, several times. Make sure the tubes are not too tight when the cartridge is in the far right and far left positions. Make any needed adjustment in the tube position so the cartridges can move freely from full right to full left and back again. Power is still off.



Put continual ink tank on the right of the printer.

Important!

The ink tank must be on the same surface as the printer. Do not elevate the ink tank or set it below the printer surface.

Pull out the small rubber plug from the air hole and place 4 pcs of air filters into air holes, the ticker side, is down into tank



Okay, now everything is put together. Double check your cartridges, they may have become loose during the assembly steps above. Reseat them, make sure they are down all the way. Some black electrical tape to hold Push the cartridges to the far right until they stop. Plug the printer in, and turn on the power. Watch for anything unusual. You are ready to start printing.


Run 3 cleaning cycles. The inks should begin to climb up the tubes. They will not all rise at the same rate. If you have banding or incomplete printing, run cleaning cycles in groups of 3. Always do a nozzle check before and after each cleaning. As soon as you have a good nozzle check, you are ready to start using the system. As you print, the inks will continue their climb until they reach the cartridge. Don't worry if the inks seem to be moving slowly, they will all get to the cartridge eventually. If you have trouble getting a good nozzle check, let the system rest for a few hours or overnight, then try again in the morning.

Auto Reset Chip

The cartridges contains auto reset chips.

No times limit. Put-Back-Full!

Put the cartridge back into the printer & ink level indicator will indicate full again.

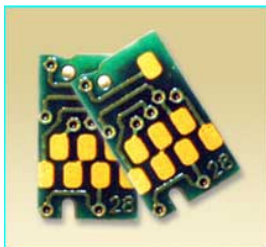

Refill ink:

Please pay attention to watching the ink quantity of cartridge outside, has already reached the cordon the liquid. It adds ink in time, pull out the stopper of the cartridges carefully. Infusing the inks according to special-purpose color . Wipe the cartridge bore and cartridge stopper with clean paper handkerchieves. During the process of packing into the ink, it must be on the same horizontal plane position that the printer and the cartridges outside.

Carefully pull out the rubber plugs from the refill holes. Refill ink according to the color in the short supply. Then put the rubber back.

Please keep the printer and reservoir at the same horizontal line during the process of refilling ink.



Points for attention.

1. After the system is used normally, printer and the cartridges outside. please don't take up the inside cartridge at will.
- 2 .In the course of typing, not allow the cartridges outside inverse, not to drive up or put down the cartridges, set the cartridges and printer on the same horizontal plane, so as not to cause the trouble of typing.
3. Please use in 15-35 degrees of environment.
- 4.The ink and discreteness of the SIS is measuring strictly, proposing using the special-purpose ink of our company, so as not to influence a systematic life-span and type quality.

Warning

Please don't drink , don't put in the place which children can touch .

2. Please prevent the sunshine from penetrating directly , please don't keep under the high temperature or the frozen state .
3. Don't Collide or drop the product.